

Declaration of Conformity

Application of Council Directive:
2004/108/EC EMC
1999/5/EC RTTE

Standards to which Conformity is declared:

CE EN 61326-1:2013
ETSI EN 301 489-1
ETSI EN 301 489-17

Manufacturer: DeFelsko Corporation
Address: 800 Proctor Avenue
Ogdensburg, NY USA 13669-2205

Type of Equipment: Handheld Inspection Equipment
Model No: PosiTector SmartLink
Year of Manufacture: 2015

The undersigned, hereby declares that the equipment specified above conforms to the listed Directive and Standards



January 1, 2015

Signature

David E. Snyder - Chief Inspector

Date

Ogdensburg, NY USA

DeFelsko[®]

Inspection Instruments

© DeFelsko Corporation USA 2015

All Rights Reserved

PosiTector[®] SmartLink[™]



Wirelessly connect PosiTector probes to your smart device

Introduction

The PosiTector SmartLink and free mobile app allow you to wirelessly connect a wide selection of existing PosiTector probes to your smart device. Take full advantage of your device's keyboard, microphone, camera, internet data connection and more to simplify and enhance your measurement inspection process.

This guide provides basic information to get you started with the PosiTector SmartLink. Full instruction manuals designed specifically for use with PosiTector SmartLink are available on our website: www.defelsko.com/sl/manuals/

The PosiTector SmartLink is compatible with current PosiTector 6000 (coating thickness), DPM (environmental), SPG and RTR-H (surface profile) probes.

Quick Start

The PosiTensor SmartLink wirelessly communicates with the smart device using Bluetooth Smart (BLE Bluetooth Low Energy). No pairing required! Ensure Bluetooth is enabled on your smart device and follow these 5 simple steps.


Step 1 Download and install the PosiTensor App

Install the PosiTensor App from the *iTunes AppStore* or *Google Play*.

The PosiTensor App displays PosiTensor SmartLinks within range (10 m / 30 ft) and provides a graphical user interface for connected probes.

Step 2 Connect a probe to the PosiTensor SmartLink

Slide the plastic probe connector horizontally (in direction of arrow shown below) until it locks into place. Reverse for detaching probe.

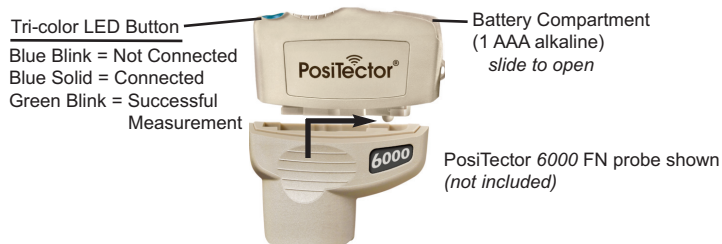

Step 3 Power-up the PosiTensor SmartLink

The PosiTensor SmartLink powers-up when the LED button is pressed (see above). To preserve battery life, the SmartLink powers down after 5 minutes of no activity. To manually power down, press and hold the LED button until it turns red (approximately 5 seconds).

Step 4 Open the PosiTensor App and connect to SmartLink

Open the PosiTensor App icon on your smart device. Apple devices will display a menu containing the following options:

Load Sample Batches - downloads sample measurement data
Help - displays help web page (recommended for new users)
Continue - closes menu

A list of available SmartLinks (listed by connected probe type and serial number) will be displayed. Select the desired SmartLink to connect. The LED button on the SmartLink will turn solid blue when successfully connected.

Step 5 Download / View the Full Instruction Manual

Full instruction manuals designed specifically for use with PosiTensor SmartLink are available on our website for each probe type.

www.defelsko.com/smartlink/manuals/

Limited Warranty, Sole Remedy and Limited Liability

DeFelsko's sole warranty, remedy, and liability are the express limited warranty, remedy, and limited liability that are set for forth on its website: www.defelsko.com/terms

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This manual is copyrighted with all rights reserved and may not be reproduced or transmitted, in whole or part, by any means, without written permission from DeFelsko Corporation. DeFelsko and PosiTensor are trademarks of DeFelsko Corporation registered in the U.S. and in other countries. Apple and iTunes are trademarks of Apple Inc., registered in U.S. and other countries. Google Play is a trademark of Google Inc. Other brand or product names are trademarks or registered trademarks of their respective holders.

Every effort has been made to ensure that the information in this manual is accurate. DeFelsko is not responsible for printing or clerical errors.